

PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and troubleshoot for each circuit.

HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Symptom	Suspect Area	See page
The theft deterrent system cannot be set	3. Indicator light circuit 4. ECU power source circuit 5. Key unlock warning switch circuit 6. Luggage compartment door key lock and unlock switch circuit 7. Luggage compartment door courtesy switch circuit 8. Door key lock and unlock switch circuit 9. Door courtesy switch circuit 10. Door unlock detection switch circuit 11. Engine hood courtesy switch circuit	DI-414 DI-418 DI-431 DI-433 DI-435 DI-437 DI-441 DI-439 DI-443
The indicator light does not blink when system is set.	Indicator light circuit	DI-414
When the system is set (The system does not operate when the rear door is unlocked).	Door unlock detection switch circuit	DI-439
When the system is set (The system does not operate when the luggage compartment door is opened by a method other than the key).	Luggage compartment door courtesy switch circuit	DI-435
When the system is set (The system does not operate when the engine hood is opened).	Engine hood courtesy switch circuit	DI-443
When the system is set (It is not canceled when the ignition key is turned to ACC or ON position).	Ignition switch circuit	DI-429
When the system is set (It still operates when the luggage compartment door is opened with the key).	Luggage compartment door key lock and unlock switch circuit	DI-433
While the system is in warning operation (Horns do not sound).	Horn relay circuit	DI-423
While the system is in warning operation (Theft deterrent horn does not sound).	Theft deterrent horn	DI-421
While the system is in warning operation (The starter cut is not cut off).	Starter relay circuit	DI-416
While the system is in warning operation (Headlights do not flash).	Headlight control relay circuit	DI-425
While the system is in warning operation (Taillights do not flash).	Taillight control relay circuit	DI-427
While the system is in warning operation (The door lock is not locked).	Door unlock detection switch circuit	DI-439
System is still set even when a rear door is open	Door courtesy switch circuit	DI-441
Even when the system is not set (Horns sound).	Horn relay circuit	DI-423
Even when the system is not set (Theft deterrent horn sounds).	Theft deterrent horn	DI-421

DIAGNOSTICS - THEFT DETERRENT SYSTEM

Even when the system is not set (Headlights stay on).	Headlight control relay circuit	DI-425
Even when the system is not set (Taillights stay on).	Taillight control relay circuit	DI-427